
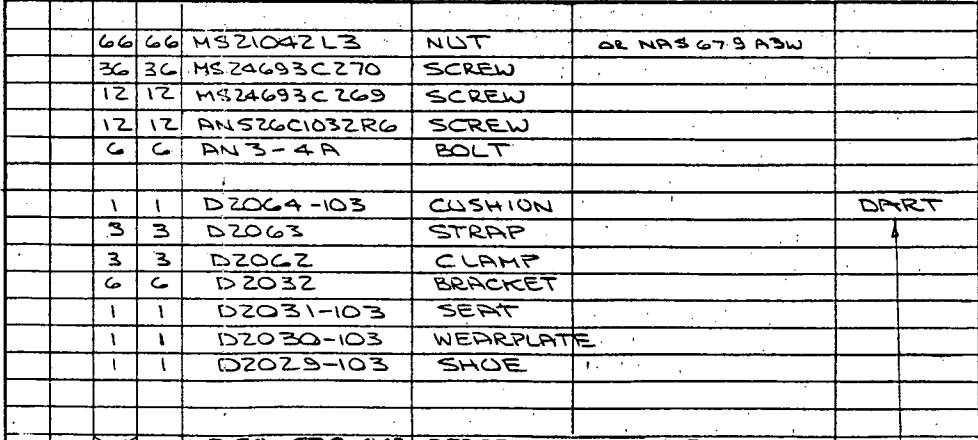


| | |
|--|--|
| | |
| | |
| | |
| | |

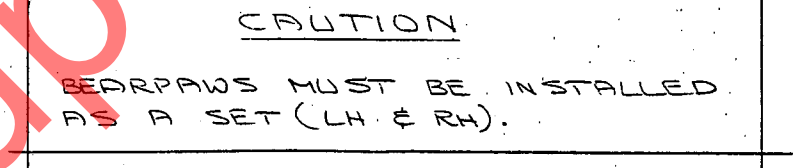

SECTION AA
LOOKING FWD THRU -041

1. COMPATABILITY OF THIS INSTALLATION IS THE RESPONSIBILITY OF THE INSTALLER. ENSURE THAT THIS INSTALLATION DOES NOT CONFLICT WITH PREVIOUS MODIFICATIONS.
2. WORKMANSHIP SHOULD BE TO THE NORMAL STANDARDS REQUIRED BY THE MAINTENANCE MANUAL.
3. ENSURE THE SKID IS SERVICEABLE PRIOR TO INSTALLATION OF THE BEARPAWS.

CAUTION.

BEARPAWS MUST BE INSTALLED
AS A SET (LH & RH).

| | | | | | |
|----|----|--------------|-----------|--------------|------|
| 66 | 66 | MS21042L3 | NUT | OR NAS679ASW | |
| 36 | 36 | MS24693C270 | SCREW | | |
| 12 | 12 | MS24693C269 | SCREW | | |
| 12 | 12 | AN526C1032RG | SCREW | | |
| 6 | 6 | AN3-4A | BOLT | | |
| 1 | 1 | D2064-103 | CUSHION | | DART |
| 3 | 3 | D2063 | STRAP | | |
| 3 | 3 | D2062 | CLAMP | | |
| 6 | 6 | D2032 | BRACKET | | |
| 1 | 1 | D2031-103 | SEAT | | |
| 1 | 1 | D2030-103 | WEARPLATE | | |
| 1 | 1 | D2029-103 | SHOE | | |

[illegible]